


Using Encoded GPI outputs on the SR/MR parallel Port

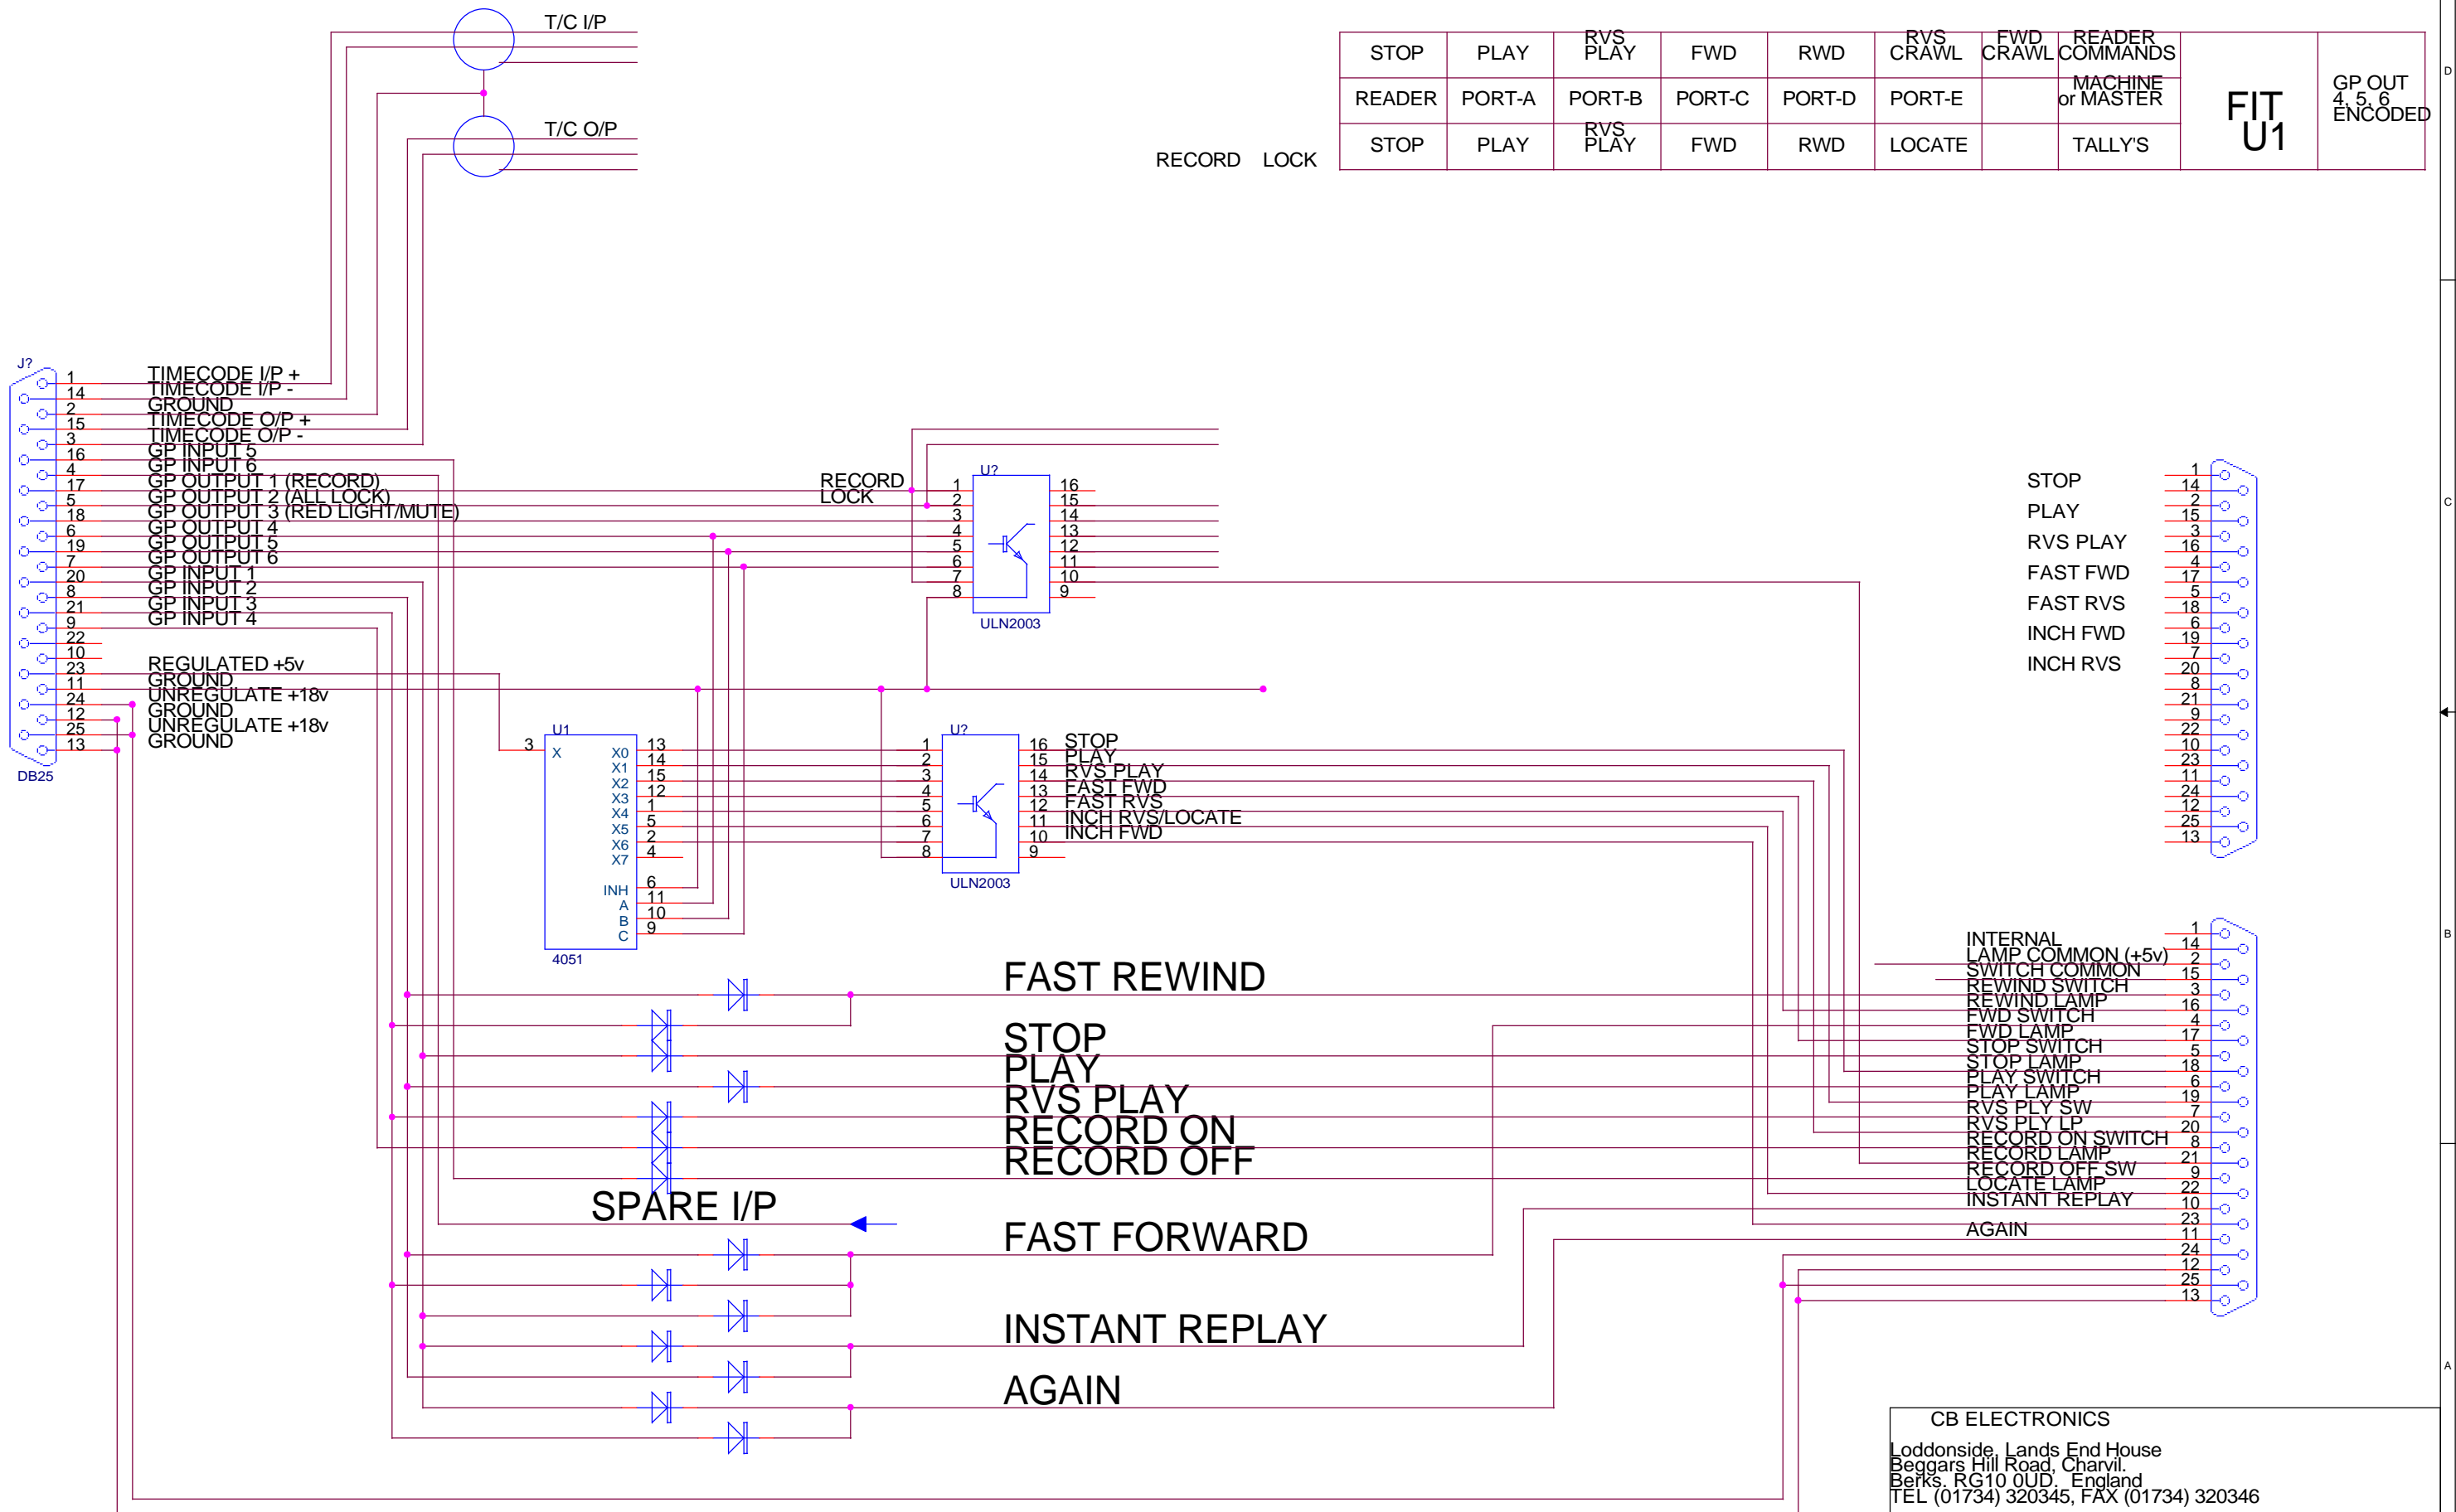

STOP	PLAY	RVS PLAY	FWD	RWD	RVS CRAWL	FWD CRAWL	READER COMMANDS	FIT U1	GP OUT 4, 5, 6 ENCODED
READER	PORT-A	PORT-B	PORT-C	PORT-D	PORT-E	MACHINE or MASTER			
STOP	PLAY	RVS PLAY	FWD	RWD	LOCATE	TALLY'S			

- 1
- 14
- 2
- 15
- 3
- 16
- 4
- 17
- 5
- 18
- 6
- 19
- 7
- 20
- 8
- 21
- 9
- 22
- 10
- 23
- 11
- 24
- 12
- 25
- 13